

## Water-Proof Thermometer

### **SPECIFICATIONS**

Range: -58 to 572°F (-50 to 300°C)  
Resolution:  $\pm 0.1^\circ$  from -19.9 to 199.9°, otherwise 1°  
Accuracy:  $\pm 1.0^\circ\text{C}$  between -20 and 100°C  
 $\pm 0.2^\circ\text{C}$  between -20 and 100°C  
Battery: 1.5-volt silver-oxide battery  
Sampling rate: 1 second  
Stem length: 4.5"  
Stem diameter: 0.14"  
Cable Length: 10'  
Accessories Supplied: Suction cups, Velcro™, battery, and instructions.

### **FEATURES**

- Waterproof and shockproof
- Stainless steel sensor probe
- Maximum/Minimum memory recall
- °F/°C selectable
- One second sampling rate
- Suction cups
- Low battery indicator

### **OPERATION**

1. Press ON/OFF button to activate.  
Press °F/°C button to switch between Fahrenheit and Celsius temperature.
2. Insert probe into the material to be measured and read display.

### **MAX/MIN MEMORY**

1. To view the minimum temperature reached since activating unit, press MAX/MIN button. "MIN" appears on the display to indicate the minimum temperature recorded.
2. Press MAX/MIN button a second time, within 3 seconds, to view the maximum temperature reached since activating unit. "MAX" appears on the display to indicate the maximum temperature recorded. **Note:** Three seconds after pressing the MAX/MIN button, the unit automatically returns to current sampling mode. Indicators "MIN" and "MAX" are no longer displayed.
3. Turn the unit OFF to reset max/min to current temperature.

**ALL OPERATIONAL DIFFICULTIES** If this thermometer does not function properly for any reason, please replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

**BATTERY REPLACEMENT** Thermometer displays a low battery indication, " ", when it is time to replace battery. Erratic readings or faint/no display are all indications that the battery must be replaced. Using a coin, turn the battery cover on back of the unit in the direction of the "open" arrow. Remove the exhausted battery and replace with a new 1.5-volt silver-oxide battery. Make certain positive (+) side is facing you. Replace battery cover.

### **Warranty, service, or recalibration**

For warranty, service, or recalibration, contact:

**TIP TEMPerature Products**  
**340 W. Broad Street**  
**Burlington, NJ 08016**

**Tel: 1-800-847-8367 Fax: (609)**  
**239-1911**

**Web: [www.tiptemp.com](http://www.tiptemp.com)**