



TIPALM001/2

Alarm Light and Buzzer for HUAMTR Series



Alarm Configuration:

- 1) Press **'MENU'** button two times. Display will read '- -'.
- 2) Press **^** or **v** Arrow buttons to set HIGH temperature alarm.
- 3) Press **'OK'** button to confirm value.
- 4) Press **^** or **v** Arrow buttons to set LOW temperature alarm.
- 5) Press **'OK'** button to confirm value. Display will read '- '.
- 6) Press **'OK'** button.
- 7) Press **^** or **v** Arrow buttons to select if the alarm should be 'ON' or 'OFF'.
- 8) Press **'OK'** button.

When Alarm Activates:

- 1) Press **'OK'** button to acknowledge alarm.
- * Alarm will remain inactive until temperature returns within OK temperature range.

Notes:

Alarm is programmed in degrees Celsius.

Lowest value is -40°C, Highest value is +85°C