

# Product User Guide

VTMS



VTMS

Vaccine Temperature Monitoring System

**TipTemp.com**

(609) 239-1900

***TipTemp.com***

# Quick Start Steps

## Product Operation (Wireless)

1. Install the MadgeTech 4 Software and USB Drivers onto a PC.
2. Plug an RFC1000 (sold separately) into a USB port on the base station computer. *(For transmissions over distances longer than 500' indoors line of sight (2,000' outdoors), plug additional RFC1000s into electrical outlets in between the base station computer and the RFTCTemp2000A.)* The red LED will illuminate on the RFC1000 to signify that it has been connected correctly.
3. Push and hold the wireless button on the RFTCTemp2000A for 5 seconds to activate wireless communication. The display will confirm "Wireless: ON" and the blue LED will blink every 40 seconds.
4. Launch the MadgeTech Software, the RFTCTemp2000A icon will automatically appear in the connected devices list, showing that the device has been recognized. Select the logger in the connected devices list, and click the "claim" button, wait for the device to finish updating. Select the Realtime Start method from the device tab and choose a desired reading rate from the drop-down menu and click "start".

*To set up or choose an Alarm for a Realtime Session, select the alarm rules tab (Refer to the Alarm Settings section).*

## Product Operation (Plugged In)

1. Install the MadgeTech 4 Software and USB Drivers onto a PC.
2. Plug the USB to Mini USB cable (included with your logger) into a USB port on your computer. With the wireless mode turned "OFF" on your device, plug the opposite end of the cable into the communication port on your RFTCTemp2000A.
3. Launch the MadgeTech Software, the RFTCTemp2000A icon will automatically appear in the software showing that the device is recognized. Select the logger in the software and choose your desired start method.
4. To download your data, select the device, click the stop button, and then click the download button to view your report in the graph.

## Product Overview

The RFTCTemp2000A is a wireless thermocouple based temperature monitoring and alarming system with LCD. A docking base is included with the data logger for mounting purposes.

### Selection Buttons

The logger is designed with 3 direct selection buttons: Scroll, Units and Wireless.

- **Scroll:** Allows user to scroll through information displayed on the LCD Screen.
- **Units:** Allows user to change displayed units of measure to either °F or °C.
- **Wireless:** Push and hold this button for 5 seconds to activate wireless communication.

### LED Indicators

**Status:** Green LED blinks every 5 seconds to indicate unit is logging.

**Wireless:** Blue LED blinks every 40 seconds to indicate unit is operating in wireless mode.

**Alarm:** Red LED blinks every 1 second to indicate an alarm condition.

### Remote Thermocouple Channel

A female subminiature (SMP) or pluggable screw terminal is located on the bottom of the logger to connect a thermocouple. The RFTCTemp2000A will accept thermocouple types J, K, T, E, R, S, B, or N.

### Wiring the Thermocouple

For MP Model:



For TB Model:



**Warning:** Note the polarity instructions. Do not attach wires to the wrong terminals.

## Additional Features and Operation

### Alarm Settings/Rules

1. To create an alarm rule, select Manage Rules in the device tab of the software.
2. Select New and enter a Rule name. Enter alarm the parameters using the drop down menus and selection circles.
3. Select OK and choose the alarm to enable. The alarm bell is green when enabled and red when disabled.

*\*\*Please refer to the Help file in the MadgeTech software for more information regarding alarm settings\*\**

### Trigger Settings

Application of trigger settings to the RFTCTemp2000A allows the device to omit excess and/or unnecessary data.

1. Select the device from the Connected Devices section in the software.
2. Click the Properties button under the device tab at the top of the software.
3. Under the Trigger tab in the Properties window, you can select a single point (window) or two point trigger.
4. To enable a high trigger, select Enable High Trigger and enter the desired high setpoint.
5. To enable a low trigger select Enable Low Trigger and enter the desired low setpoint.
6. To disable a high or low trigger, simply uncheck the applicable box.
7. Click Apply to apply the trigger settings to the RFTCTemp2000A.

## Product Maintenance


### Mounting Instructions

The base provided with your RFRHTemp2000A can be used in two ways.

The bottom of the logger snaps in place to use and mount the unit on a table top or horizontal surface.

The base can also securely snap to the backside of the logger for wall mounting if desired (as shown right).

There are 2 holes in the base to allow for screws for mounting.

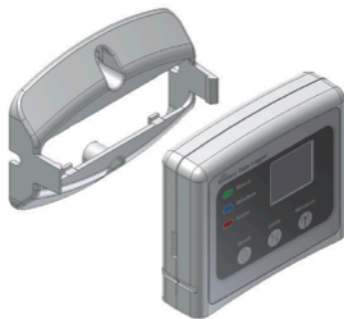

## Battery Replacement

### Materials: U9VL-J Battery

1. On the bottom of the enclosure, open the battery compartment by pulling in on the cover tab.
2. Remove the battery by pulling it from the compartment.
3. Install the new battery, taking note of the polarity.
4. Push the cover closed until it clicks.

## Recalibration

Standard recalibration for the RFTCTemp2000A is two points, 25°C and 60°C for the internal channel (ambient), and 0mV for the thermocouple (remote) channel. Recalibration is recommended annually for any MadgeTech data logger; a reminder is automatically displayed in the software when the device is due. Use the RMA system to submit your device for recalibration (Steps below).

### Pricing:

RFTCTemp2000A (MP and TB models)

Recalibration traceable to NIST                    \$70.00

Recalibration     \$40.00

### RMA Instructions

To send a device back in to MadgeTech, we ask that our customers go to the MadgeTech website and create an RMA. To start this process, please follow the steps outlined below:

1. Visit [www.madgetech.com](http://www.madgetech.com), click on the Services tab, and select RMA Process.
2. When the web page opens, please sign in. If this is your first time creating an RMA, select Create an Account and follow the on screen instructions. Once signed in, click on the Make New RMA button and fill in all the blank fields.
3. Complete the applicable fields on the form including customer Billing and Shipping information, even if they are the same.
5. Print out the confirmation page that follows containing the RMA number and MadgeTech's address for shipping. A Return Merchandise Authorization must be accompanied by a copy of the confirmation page, and shipping is prepaid by the customer. The RMA number should be clearly marked on the outside of the package.
6. Please ship the package via UPS, FedEx, TNT, or DHL to the address listed on your confirmation page. USPS will not ship MadgeTech data loggers.

A notification email will be automatically sent when MadgeTech has received your RMA. Once we receive your device(s), we will perform a free evaluation of the unit(s) before contacting you (with a quote if requested). We shall await your confirmation before proceeding with any work.

### Troubleshooting Tips

#### Why are my devices not appearing?

If your RFTCTemp2000A isn't showing up in the Connected devices panel, or you receive an error message while using the RFTCTemp2000A, try the following:

- Check that your RFC1000 is properly connected. For more information, see Troubleshooting Interface Cable problems (below)
- Ensure that the battery is not discharged. For best voltage accuracy, use a voltage meter connected to the battery of the device. If you have one available, try switching the battery with a fresh 9V lithium.
- Ensure that no other MadgeTech software (such as MadgeTech 2, or MadgeNET) is running in the background
- Ensure that you are using MadgeTech version 4. MadgeTech 2 and MadgeNET are not the correct software for connecting with the RFTCTemp2000A
- Ensure that the Connected Devices panel is large enough to display devices. This can be verified by positioning the cursor on the edge of the Connected Devices panel until the resize cursor appears, then dragging the edge of the panel to resize it

#### Troubleshooting Interface Cable problems

##### Check that the software recognizes your RFC1000 wireless receiver

If your device is not appearing in the Connected Devices list, it may be that the RFC1000 is not properly connected.

1. In the software, click the File Button , then click Options.
2. In the Options window, click Communications.
3. The Detected Interfaces box will list all of the available communication interfaces. If your RFC1000 is listed there, then the software has correctly recognized and is ready to use it.

##### Check that Windows recognizes your RFC1000 wireless receiver

If the software does not recognise your RFC1000, there may be a problem with Windows or the USB drivers.

1. In Windows, click Start, right-click Computer and choose Properties or you can press Windows+Break as a keyboard shortcut.
2. Click Device Manager in the left hand column.
3. Double click Universal Serial Bus Controllers.
4. Look for an entry for Datalogger Interface.
5. If the entry is present, and there are no warning messages or icons, then windows has correctly recognized your RFC1000.
6. If the entry is not present, or has an exclamation point icon next to it, you may need to install the USB drivers. These are available on your software flash drive, and on the MadgeTech website.

##### Ensure that the USB end of the RFC1000 is securely connected to the computer

1. Locate the USB-A plug of your RFC1000
2. If the interface cable is connected to your PC, unplug it
3. Wait ten seconds, then reinsert it
4. Check to make sure that the red LED is lit, indicating a successful connection.

***Tip Temperature Products***

Part Number	RFTCTemp2000A
Internal Temperature Sensor	Semiconductor
Internal Temperature Range	-20 to +60°C (-4°F to +140°F)
Internal Temperature Resolution	0.1°C (0.18°F)
Remote Channel Temperature Sensor Range, Resolution & Accuracy	*See Table below for Details
Cold Jct. Compensation	Automatic based on internal channel
Memory	16,128/channel
Sample Rate	1 second up to 24 hours
Channels	1 Internal & 1 Remote
Required Interface Package	RFC1000 (wireless); USB to Mini USB Cable
Baud Rate	250,000
Typical Battery Life	3 years typical at 1 minute reading rate
Operating Environment	-20 to +60°C (-4°F to +140°F)
Material	ABS Plastic
Dimensions	3.0" x 3.5" x 0.95" (76.2mm x 88.9mm x 24.1mm) - Data logger only; does not include docking base
Wireless Range	2000' max. outdoors (line of sight unobstructed) 500' max indoors (typical urban)

\* Remote Channel Range, Resolution & Accuracy

Thermocouple	Range (°C)	Resolution	Accuracy
J	-210 to +760	0.1°C	±0.5°C
K	-270 to +1370	0.1°C	±0.5°C
T	-270 to +400	0.1°C	±0.5°C
E	-270 to +980	0.1°C	±0.5°C
R	-50 to +1760	0.5°C	±2.0°C
S	-50 to +1760	0.5°C	±2.0°C
B	+50 to +1820	0.5°C	±2.0°C
N	-270 to +1300	0.1°C	±0.5°C

**Battery Warning**

**WARNING: MAY LEAK, FLAME OR EXPLODE IF DISASSEMBLED, SHORTED, CHARGED, CONNECTED TOGETHER, MIXED WITH USED OR OTHER BATTERIES, AND/OR EXPOSED TO FIRE/ HIGH TEMPERATURE. DISCARD USED BATTERY PROMPTLY, KEEP OUT OF REACH OF CHILDREN.**

***TipTemp.com***

340 W. Broad St.  
Burlington, NJ 08016  
(609) 239-1900  
Fax: (609) 239-1911